





Item#: \_\_\_\_\_  
 Quantity: \_\_\_\_\_  
 Model #: E1-BS6OE-   
 Project #: \_\_\_\_\_

## E1 System Silverware Cylinder Basket

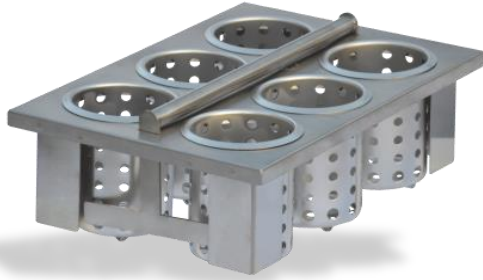

**Shown: E1-BS6OE-SS**  
Patent Pending

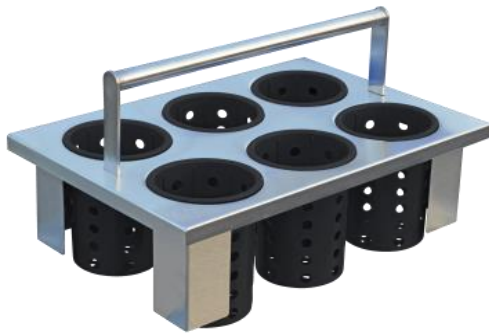

**Shown: E1-BS6OE-RP-BLACK**  
Patent Pending

### Standard Features:

- Drop-in silverware basket.
- Holds (6) Steril-Sil silverware cylinders (included).
- Flanged body for use in countertop dispensers, drop-in countertop dispensers, carts, or mobile counters.
- Drop-down round handle for ease of carrying, handle falls flat for dispensing directly from the basket when dropped into a dispenser.
- Reloading one basket with (6) preloaded cylinders increases efficiency.
- Unit at-rest raises the silverware cylinders for easy lift out.
- Wash silverware and cylinders directly in the basket for increased efficiency.
- Works exclusively with the Steril-Sil E1 Silverware Handling System.
- Fully-welded 304 stainless steel construction.
- NSF approved.
- Made in the U.S.A.




### Product Specification:

Steril-Sil model #E1-BS6OE-  drop-in silverware basket. Holds (6) Steril-Sil high-capacity silverware cylinders (included). Fully-welded 304 series stainless steel construction. Includes a drop-down handle for dispensing flatware directly from the basket. Works exclusively with the Steril-Sil E1 Silverware Handling System. Use with E1 System countertop dispensers, drop-in countertop dispensers, carts, and mobile counters. NSF approved. Made in the U.S.A.


### Notes:

**Steril-Sil Company, LLC**  
 Phone: 800-784-5537  
 Email: quotes@sterilsil.com  
 www.sterilsil.com

## E1 System Silverware Cylinder Basket (cont'd)

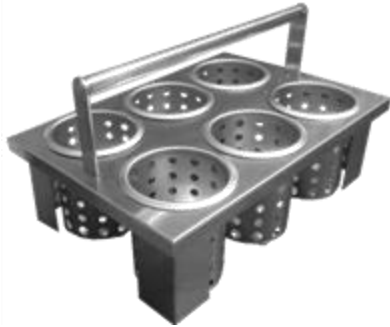

Carrying Position - Cylinders are flush and the handle locks into position for secure carrying.

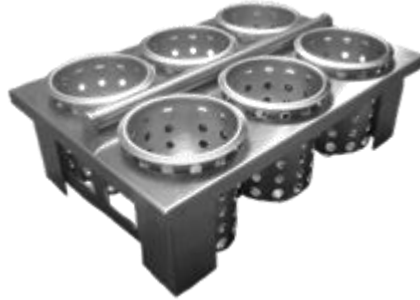


At-Rest Position - Set on a work surface, the cylinders extend up 1/2" for easy removal.



Drop-In Position - The cylinders and handle lay flush for dispensing.



E1-BS6OE-SS includes (6) S-500 stainless-steel silverware cylinders.

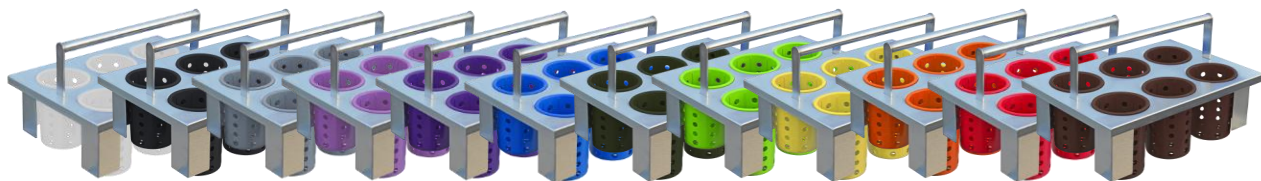

E1-BS6OE-RP-(choose color) includes (6) RP-25 series plastic silverware cylinders. Choose from white, black, gray, violet, purple, blue, hunter (green), lime (green), yellow, orange, red or brown.

### E1 System Drop-In Silverware Basket

Designed for use with the Steril-Sil E1 System

Model #	Description	Capacity
E1-BS6OE-SS	E1 System drop-in silverware basket with S-500 stainless steel cylinders	6 cylinders
E1-BS6OE-RP-(choose color)	E1 System drop-in silverware basket with RP-25 series colored plastic cylinders. Choose from (12) different colors in the RP-25 series when placing your order	6 cylinders

### Related Products:



**E1-CBD-2V**  
E1 System countertop dispenser with inserts



**E1-CRT36-3V**  
E1 System 36" tray and silverware cart



**E1-BSC-18**  
E1 System silverware basket storage cart



**E1-SK-2**  
E1 System soak sink for E1 System baskets